



RECOMMENDED MOUNTING DETAILS FOR 1600 SERIES F/L MAILBOXES

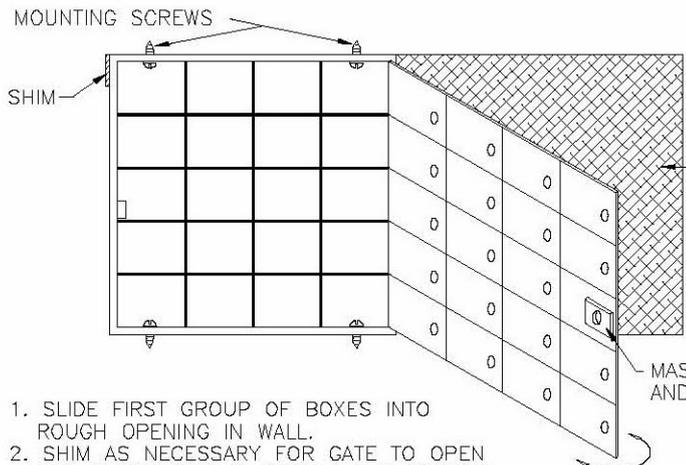



REFER TO ARCHITECTS CONSTRUCTION DRAWING FOR WALL DETAILS.

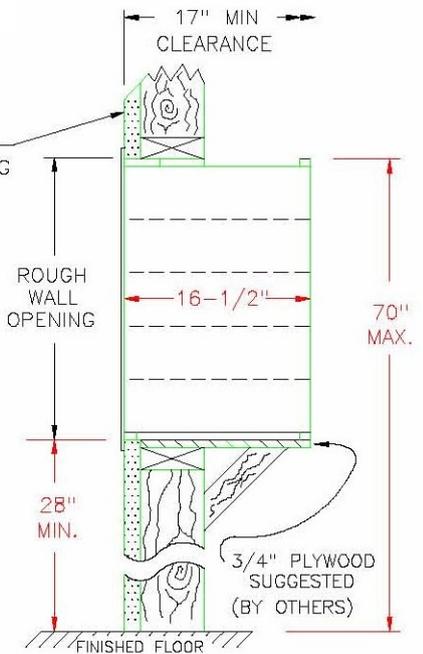

1. SLIDE FIRST GROUP OF BOXES INTO ROUGH OPENING IN WALL.
2. SHIM AS NECESSARY FOR GATE TO OPEN AND CLOSE FREELY. INSTALL AND TIGHTEN MOUNTING SCREWS. (2 IN TOP, 2 IN BOTTOM)
3. INSTALL NEXT GROUP OF BOXES SAME AS ABOVE.

MASTER LOCK - SUPPLIED AND INSTALLED BY U.S.P.S.

OPTIONAL SNAP ON TRIM MOUNTING DETAILS

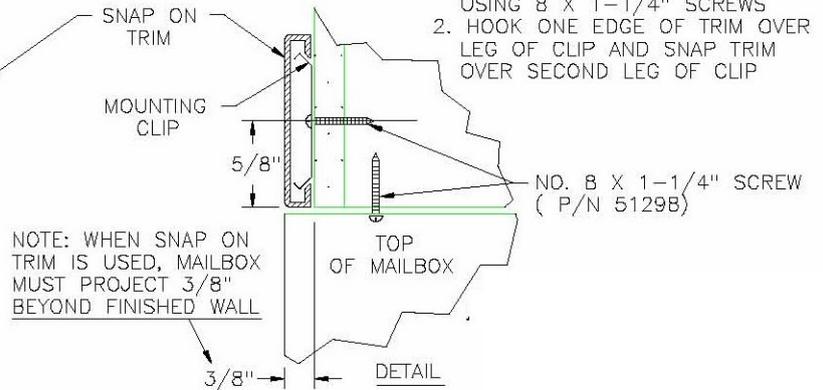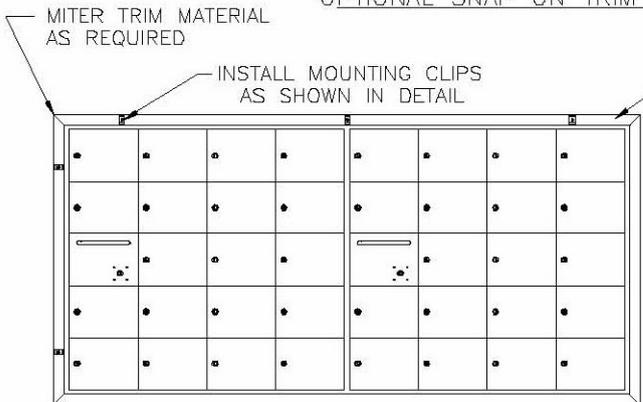

1. SCREW MOUNTING CLIP TO WALL USING 8 X 1-1/4" SCREWS
2. HOOK ONE EDGE OF TRIM OVER LEG OF CLIP AND SNAP TRIM OVER SECOND LEG OF CLIP