





Lock Replacement Guide



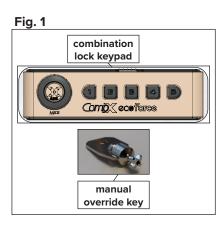

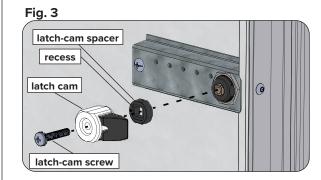

Remove the lock from the door.

- Open the door of your Package Protector™ (Fig. 2) using the combination lock keypad, or the manual override key originally provided with your Package Protector™ (Fig. 1).
- 2. Remove the latch-cam screw from the back of the latch cam, using a Phillips screwdriver. Remove the latch cam and the spacer from the lock (Fig. 3).
- **3.** Remove the lock-mount screw from the left side of the mounting bracket, using a Phillips screwdriver (**Fig. 4**).
- **4.** Hold onto the lock on the outside of the door and unscrew the large cylinder nut from the lock mechanism, using an adjustable wrench (**Fig. 4**).
- **5.** Remove the mounting bracket, lock, and lock trim from the door (**Fig. 5**).
 - Keep the mounting bracket for reuse when reinstalling the new lock

Install the new lock using new parts supplied with the lock.

- 1 Place the lock trim and lock onto the outside of the door (Fig. 6).
- 2. Place the original mounting bracket over the lock from inside the door and secure in place by finger tightening the large cylinder nut (**Fig. 4**).
- **3.** Place the lock-mount screw through the left side of the mounting bracket into the back of the lock, and secure using a Phillips screwdriver. Tighten the cylinder nut, using an adjustable wrench (**Fig. 4**).
- 4. Position the latch cam and spacer onto the back of the lock mechanism. Be sure the latch-cam spacer is oriented with the recessed side toward the latch cam, and the flat side toward the lock body. Secure the cam and spacer in place with the latch-cam screw, using a Phillips screwdriver (Fig. 3).
- **5.** Test the operation of the new lock to ensure it works properly before closing the door.

