INSTALLATION INSTRUCTIONS

Drug Return Collection Drop Unit

Tools and/or Materials Required:

- Adjustable wrench or socket set
- Phillips head screwdriver
- ⅜ Inch drill bit / electric drill [concrete drill bit may be necessary for floor anchoring]
- Other tools/materials may also be necessary depending upon actual installation
- Installation Hardware (not included)

Installation Procedure:

1. Confirm installation site with onsite management prior to installation
2. Site Prep – installation site must be free off dirt, moisture and wall debris, and near an electrical outlet.
3. Remove DRCD unit from packaging and locate keys and open key-locked access door.
4. Position unit against the wall where unit is to be installed. Locate anchoring holes and center mark holes for drilling [wall mount – rear panel, floor mount – bottom panel, or both]

   WARNING: DO NOT DRILL HOLES DIRECTLY ABOVE OR BELOW WALL OUTLETS

5. Remove the DRCD unit and set aside to gain access to drill marks and drill holes. Note: 4 lag screws are also provided for possible solid wall or wall stud anchoring configurations [see Figure 2]

   Floor Anchoring – install 4 expansion anchors provided [see Figure 3]

   Wall Anchoring – re-position DRCD near install site wall and insert 4 toggle bolts through hole and spacers provided [see Figure 1 & 2]

6. Align unit against wall anchoring holes. Insert toggle bolt wing nut through wall anchoring holes and thumb tighten until floor-anchoring holes are aligned with expansion anchors installed in step 6 – if used. If used, insert 4 floor anchor bolts and tighten all screws and bolts as needed.
7. Clean unit and remove all packaging and hardware debris.

(Unit diagram including dimensions on the back)

DRUG RETURN COLLECTION DROP UNIT
(HARDWARE SHOWN)

Figure 1

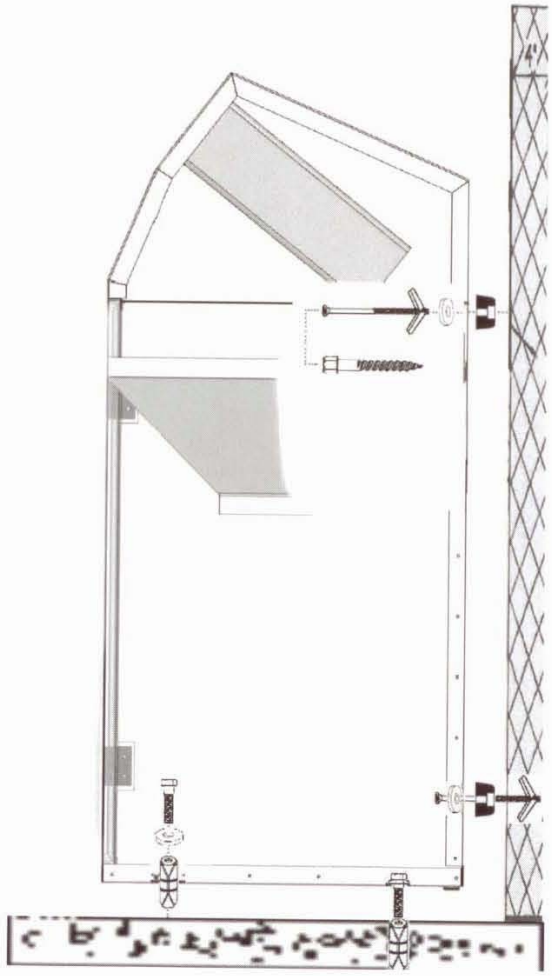

Figure 2

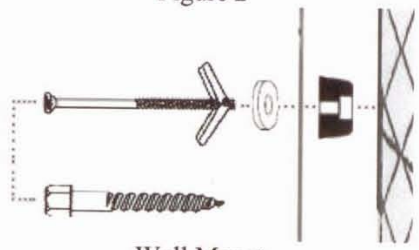

Wall Mount
-top toggle 'wing' nut for hollow wall or,
-bottom hex head lag for solid wall or studs

Figure 3

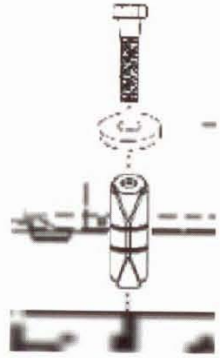

Floor Mount
- expansion anchor